



Škoda **Octavia** 5 doors/5 seats/hatchback from 2024

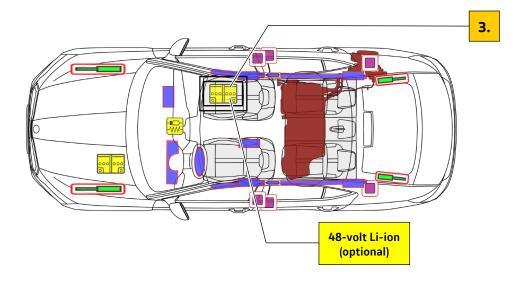







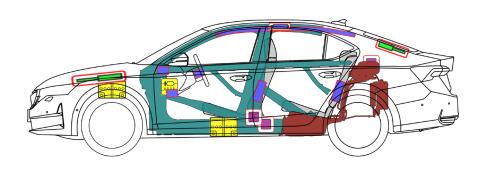

Airbag	Stored gas inflator		Seat belt pretensioner	SRS control unit	Fuel tank
Gas strut/preloaded spring	High strength zone	000	Battery low voltage	Zone requiring special attention	



Škoda Octavia

5 doors/5 seats/hatchback from 2024

1. Identification / recognition

Lettering



2. Immobilisation / stabilisation / lifting

Immobilising the vehicle



- Press the "P" button
- Apply the electric parking brake
- Switch off the ignition (power display "OFF")
- Secure the vehicle so it cannot roll away

Lifting points



Suitable lifting points

3. Disable direct hazards / safety regulations

Switching off the ignition



Press the "Engine Start/Stop" button in the steering column without engaging the brake pedal.



Keep the vehicle key at least five metres away from the vehicle wherever possible.



Disconnecting the 12-volt battery



In the engine compartment Disconnect the negative terminal from the battery

Additional information Document number Version 02 (04/2024) Page



Škoda Octavia


5 doors/5 seats/hatchback from 2024



Disconnecting the 48-volt battery


In the event of accidents where the airbag is deployed, the 48-volt vehicle electrical system will be deactivated automatically as soon as airbag deployment has been detected.

For all other cases, the 48-volt vehicle electrical system can be deactivated as follows:

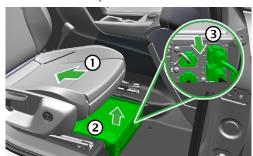

- ① Move the right seat all the way back
- ② Remove the battery cover in the footwell on the right-hand side of the vehicle
- 3 Unplug all connectors

4. Access to the occupants

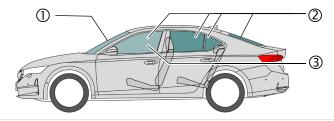

Glass types:

- ① Composite safety glass
- ② Single-pane safety glass
- ③ Composite safety glass, optional

Electrical seat adjustment

Mechanical seat adjustment

Mechanical steering column adjustment





5. Stored energy / liquids / gases / solids












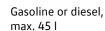











12 V











48 V Lithium-ion



Škoda Octavia

5 doors/5 seats/hatchback from 2024

6. In case of fire












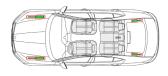



Lithium-ion batteries can self-ignite or reignite after firefighting measures have been

Use appropriate personal protective equipment!



7. In case of submersion

Once the vehicle has been recovered, let the water drain out and disconnect the battery or batteries (see chapter 3). Use appropriate personal protective equipment!

8. Towing / transportation / storage




Lithium-ion batteries can self-ignite or reignite after firefighting measures have been

Use appropriate personal protective equipment!





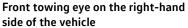



Rear towing eye on the right-hand side of the vehicle





9. Important additional information

Škoda Emergency Services Rescue Sheets: www.skoda-auto.com/services/rescuers

10. Explanation of pictograms used

















If a vehicle has been involved in an accident, do not tow it on its drive axles.



Flammable

Corrosives

Hazardous to the human health

Environmental

Vehicle on fuel of liquid group 2

Vehicle on fuel of liquid group 1

Use water to extinguish the fire

Remove smart key

 \square IR %Use thermal Infrared camera



bonnet

Release the

Document number Skoda_Octavia_Hatchback_2024_5d_GD_EN Version

Page 4 of 4