




ŠKODA OCTAVIA COMBI III CNG (2 natural gas tanks from 22/2018 to 10/2020)

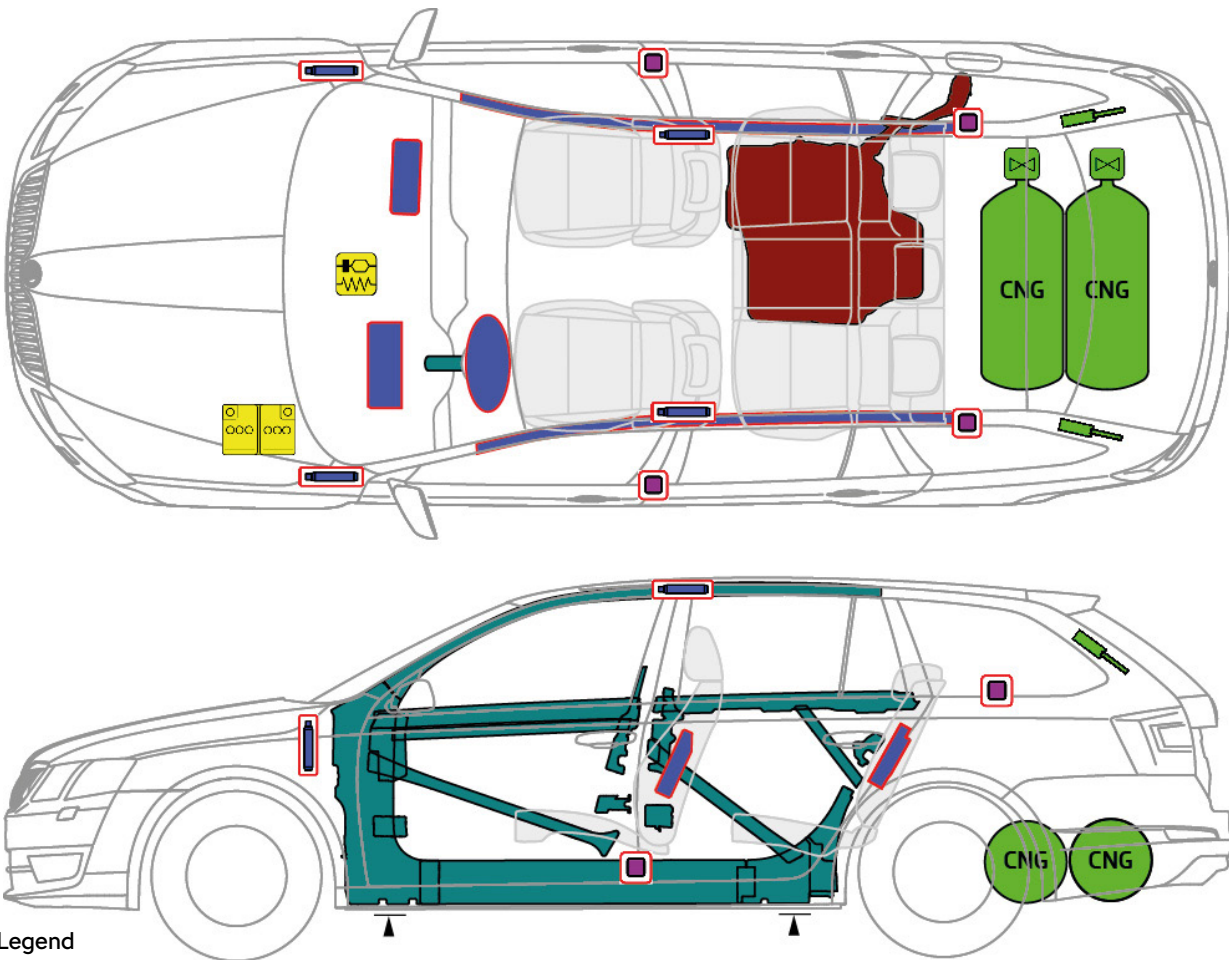

Legend

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut / Preloaded spring		High strength zone		Zone requiring special attention		
	Battery low voltage		Ultra capacitor, low voltage		Fuel tank (petrol or diesel)		Gas tank		Safety valve
	High voltage battery pack		High voltage power cable		High voltage disconnect		Fuse box disabling high voltage system		Ultra capacitor, high voltage



ŠKODA OCTAVIA COMBI III CNG (2 natural gas tanks from 22/2018 to 10/2020)

1. Identification / recognition

Observe the illustrations on page 52.

 - lettering G-TEC on the tailgate.

2. Immobilisation / stabilisation / lifting



Automatic gearbox


Shift selector lever into position "P".



Manual gearbox

Put the shift lever into neutral position.

Secure the vehicle with the parking brake.

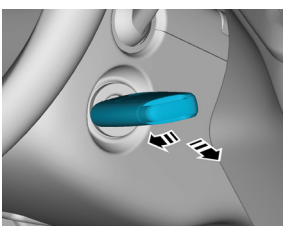

Turn the ignition key to the "OFF position" and remove it
or

 


Press the START-STOP button.



If possible, raise the vehicle at the marked lifting points.

3. Disable direct hazards / safety regulations



Disconnect the 12V vehicle electrical system battery in the engine compartment from the electrical system using a suitable tool.
First disconnect the negative pole (-), then the positive pole (+) of the on-board power supply battery.

4. Access to the occupants

Observe High strength zones on side 52.

ID Number	Version number	Version date	Page
TMB 5E	07	10/2020	2 of 4



ŠKODA OCTAVIA COMBI III CNG
(2 natural gas tanks from 22/2018 to 10/2020)

5. Stored energy / liquids / gases / solids



Fuel tank - Petrol engine



Fuel tank - Natural gas (CNG)

6. In case of fire



Determine suitable extinguishing agents (water, foam, powder) and operational procedures for fire fighting depending on the application. Provide personal protective equipment with respiratory protection as instructed by the head of operations.

7. In case of submersion

In the case of leaking equipment, use a suitable device to limit the spread on the surface of the water in accordance with the command of the operations manager.

8. Towing / transport / storage

Inform the towing service about any leaking equipment.
 The vehicle must always be transported and stored with the gas drive deactivated, i.e. with manually shut off valves on the natural gas fuel tanks.
 Park the vehicle at a desired safe distance from buildings and other vehicles (quarantine area).

9. Important additional information

Natural gas (CNG) is under high pressure of up to **200 bar**.
 Risk of explosion due to escaping natural gas.

ŠKODA



ŠKODA OCTAVIA COMBI III CNG
(2 natural gas tanks from 22/2018 to 10/2020)

10. Explanation of the pictograms used

Flammable	Environmental hazard	Acute toxicity	Hazardous to the human health	Explosive	Gas under pressure	CNG vehicle	Gasoline vehicle
Use water to extinguish the fire	Lifting point; central support						