




ŠKODA KODIAQ, KODIAQ RS (from 2021)

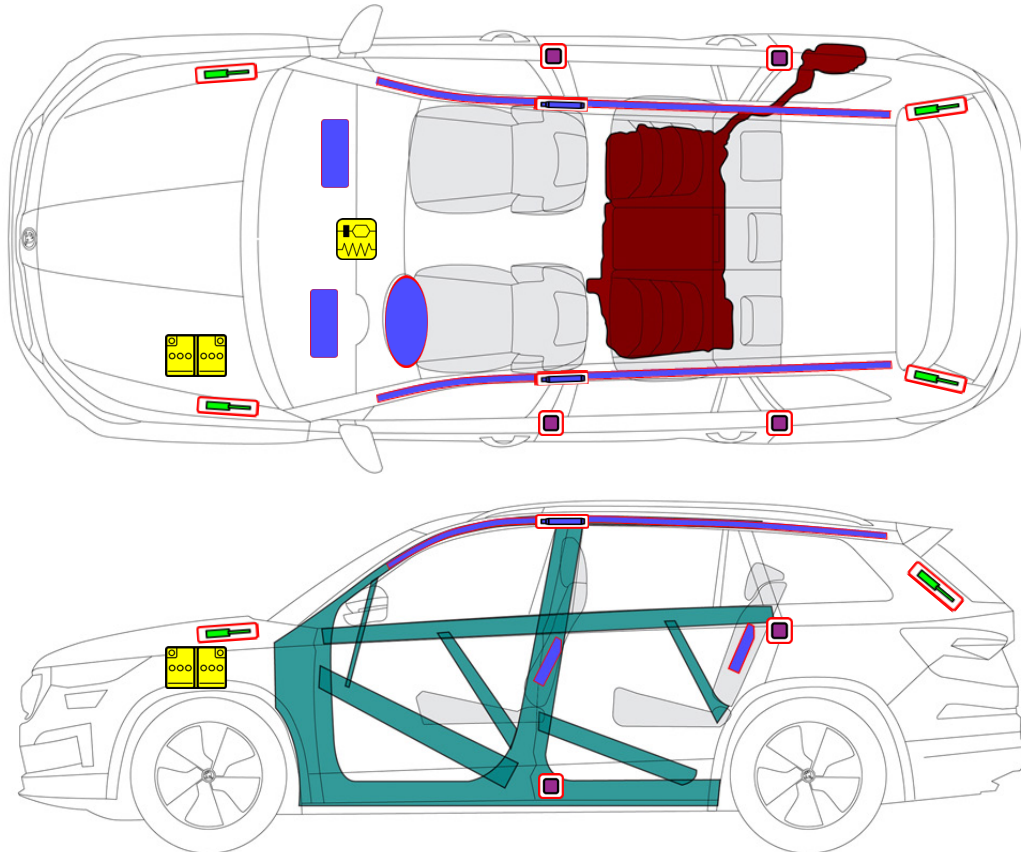

Legend

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut / Preloaded spring		High strength zone		Zone requiring special attention		
	Battery low voltage		Ultra capacitor, low voltage		Fuel tank		Gas tank		Safety valve
	High voltage battery pack		High voltage power cable		High voltage device that disconnects high voltage		Fuse box disabling high voltage		High voltage ultra-capacitor
	Fuel tank content gasoline/ethanol		Fuel tank content Diesel						



1. Identification / recognition

Lettering KODIAQ on the tailgate.



Lettering KODIAQ RS on the tailgate.




2. Immobilisation / stabilisation / lifting


2A - Immobilisation / stabilisation



Automatic gearbox
 1. Shift selector lever into position "P".
 2. Secure the vehicle with the parking brake.

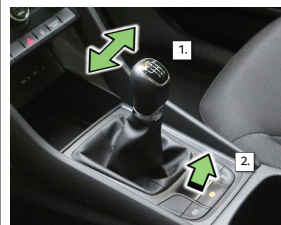

Manual gearbox
 1. Put the shift lever into neutral position.
 2. Secure the vehicle with the parking brake.

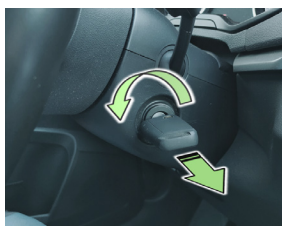


Turn the ignition key to the "OFF position" and remove it

or




 
Press the START-STOP button.



Remove the key from the vehicle.

2B - Lifting

Lifting points

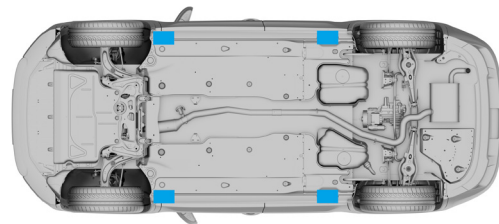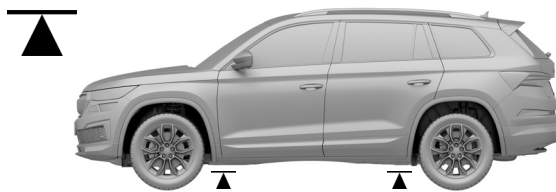

3. Disable direct hazards / safety regulations

 
3A - Shut power off




See chapter 2A



a) Locate the 12V battery in the engine compartment, see chapter 3B.




or

 




b) Disconnect the 12V battery from the vehicle electrical system using a suitable tool.

1. Disconnect the negative pole (-).
2. Disconnect the positive pole (+).

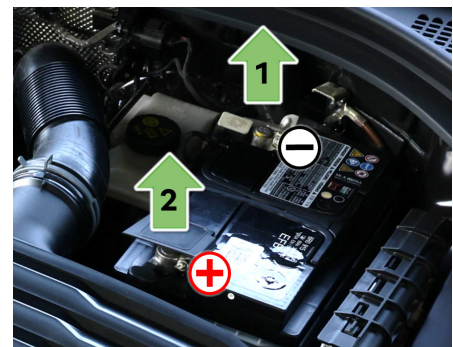




3B - Access to 12V battery

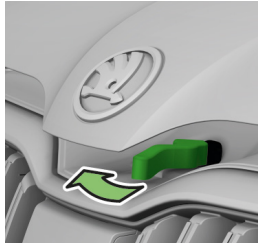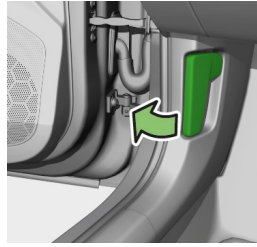 

4. Access to the occupants

High strength body areas

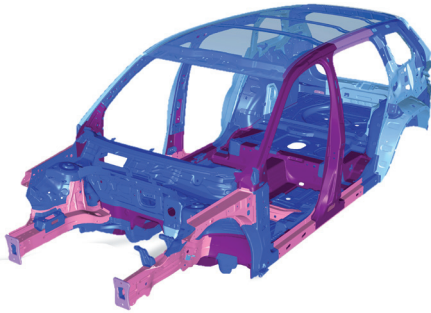

Glass types: 1. Laminated safety glass
2. Toughened safety glass



5. Stored energy / liquids / gases / solids

		63L
		63L
		12V
		0,5Kg

6. In case of fire



Use appropriate protective equipment!

7. In case of submersion

After withdrawing the vehicle from the water, allow the water to drain.
Use appropriate protective equipment!



8. Towing / transportation / storage

Do not tow the vehicle on the front axles.



10. Explanation of pictograms used

	Flammable		Environmental hazard		Corrosives
	Hazardous to the human health		Explosive		Vehicle on fuel of liquid group 2
	Air-conditioning component		General warning sign		Vehicle on fuel of liquid group 1
	Use water to extinguish the fire		Bonnet		Remove smart key
	Lifting point; central support				