




ŠKODA OCTAVIA IV CNG (from 2020)

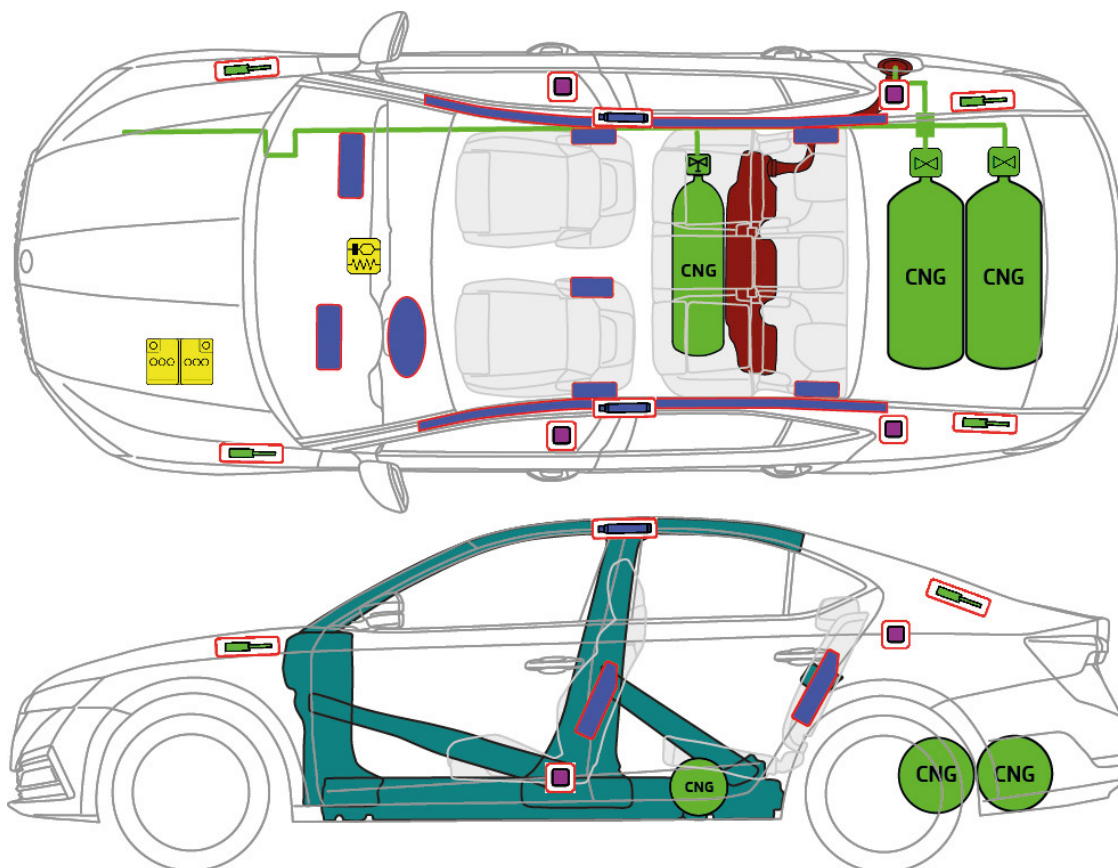

Legend

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut / Preloaded spring		High strength zone		Zone requiring special attention		
	Battery low voltage		Ultra-capacitor, low-voltage		Fuel tank		Gas tank		Safety valve
	Battery pack, high-voltage		High voltage power cable		High voltage disconnect		Fuse box disabling high voltage		High voltage ultra-capacitor
	Fuel tank content gasoline/ethanol		Gas line (generic)						



1. Identification / recognition

Lettering **OCTAVIA** and **G-TEC** on the tailgate.




Natural gas filler




2. Immobilisation / stabilisation / lifting

A - Immobilisation / stabilisation

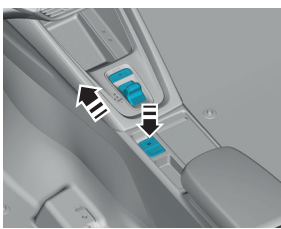


Automatic gearbox

1. Shift selector lever into position "P".
2. Secure the vehicle with the parking brake.

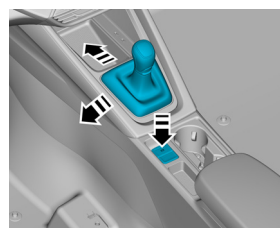

Manual gearbox

1. Put the shift lever into neutral position.
2. Secure the vehicle with the parking brake.

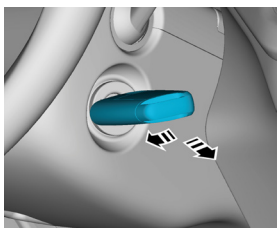

Turn the ignition key to the "OFF position" and remove it

or





Press the START-STOP button.



Remove the key from the vehicle (distance > 5m).

B - Lifting

Lifting points

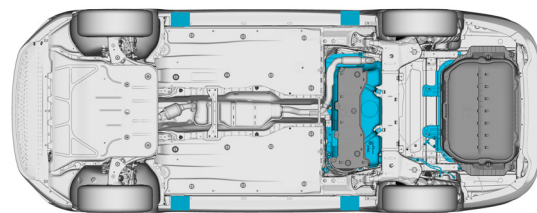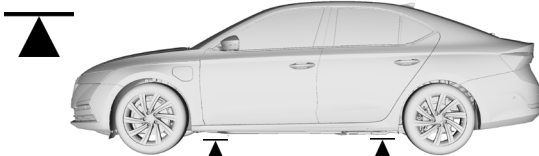

3. Disable direct hazards / safety regulations

Deactivate the vehicle's 12V on-board voltage in the engine compartment.



Disconnect the 12V vehicle electrical system battery in the engine compartment from the electrical system using a suitable tool.


1. Disconnect the negative pole (-).
2. Disconnect the positive pole (+).






Gas leakage prevention


Manually close valves on the gas tanks.

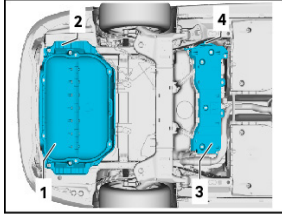


Remove covers for gas tanks No. 1, No. 2.

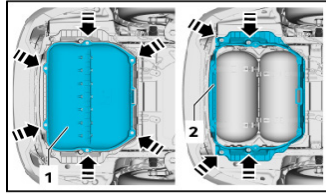


Remove covers for gas tank No. 3.

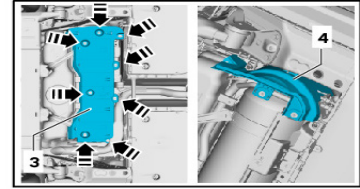


Close valve on gas tank No. 1 in direction of arrow using handwheel -T50026-(ŠKODA special tool) or pliers.

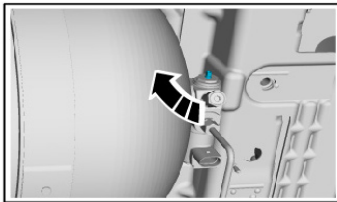

Close valve on gas tank No. 2 in direction of arrow using handwheel -T50026-(ŠKODA special tool) or pliers.

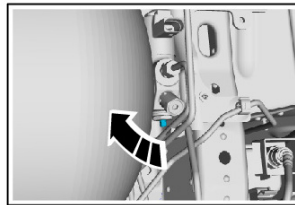

Close valve on gas tank No. 3 in direction of arrow using handwheel -T50026-(ŠKODA special tool) or pliers.

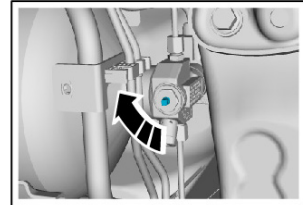


4. Access to the occupants

High strength body areas



Glass types: 1. Laminated safety glass
2. Toughened safety glass

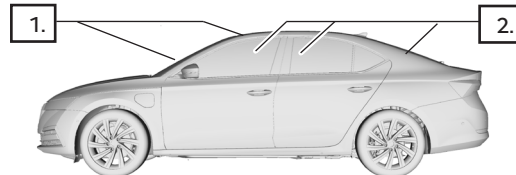

5. Stored energy / liquids / gases / solids

			Gas tank
			12V
			114,5L 260Bar
			39,5L
			0,5Kg



6. In case of fire



The overpressure safety devices of the gas tanks open at approx. 110 ° C (blow-off noise).
The tanks are emptied after approx. 90 seconds.
Wear appropriate protective equipment!

7. In case of submersion

After recovering the vehicle, let the water drain off. If gas escapes, close the shut-off valves on the tanks (see Chapter 3, page 3).

8. Towing / transportation / storage

When towing and parking the vehicle, ensure that gas tanks are not damaged.
If gas escapes, close the shut-off valves on the tanks (see Chapter 3, page 3).

10. Explanation of pictograms used

Flammable	Environmental hazard	Corrosives	Hazardous to the human health	Explosive	Gases under pressure	Vehicle on CNG	Vehicle on fuel of liquid group 2	Air-conditioning component
General warning sign	Use water to extinguish the fire	Use wet foam to extinguish the fire	Use ABC powder to extinguish the fire	Lifting point; central support	Bonnet	Carbon structure	Remove smart key	